


# TRUMA SPARES

## Combi 4

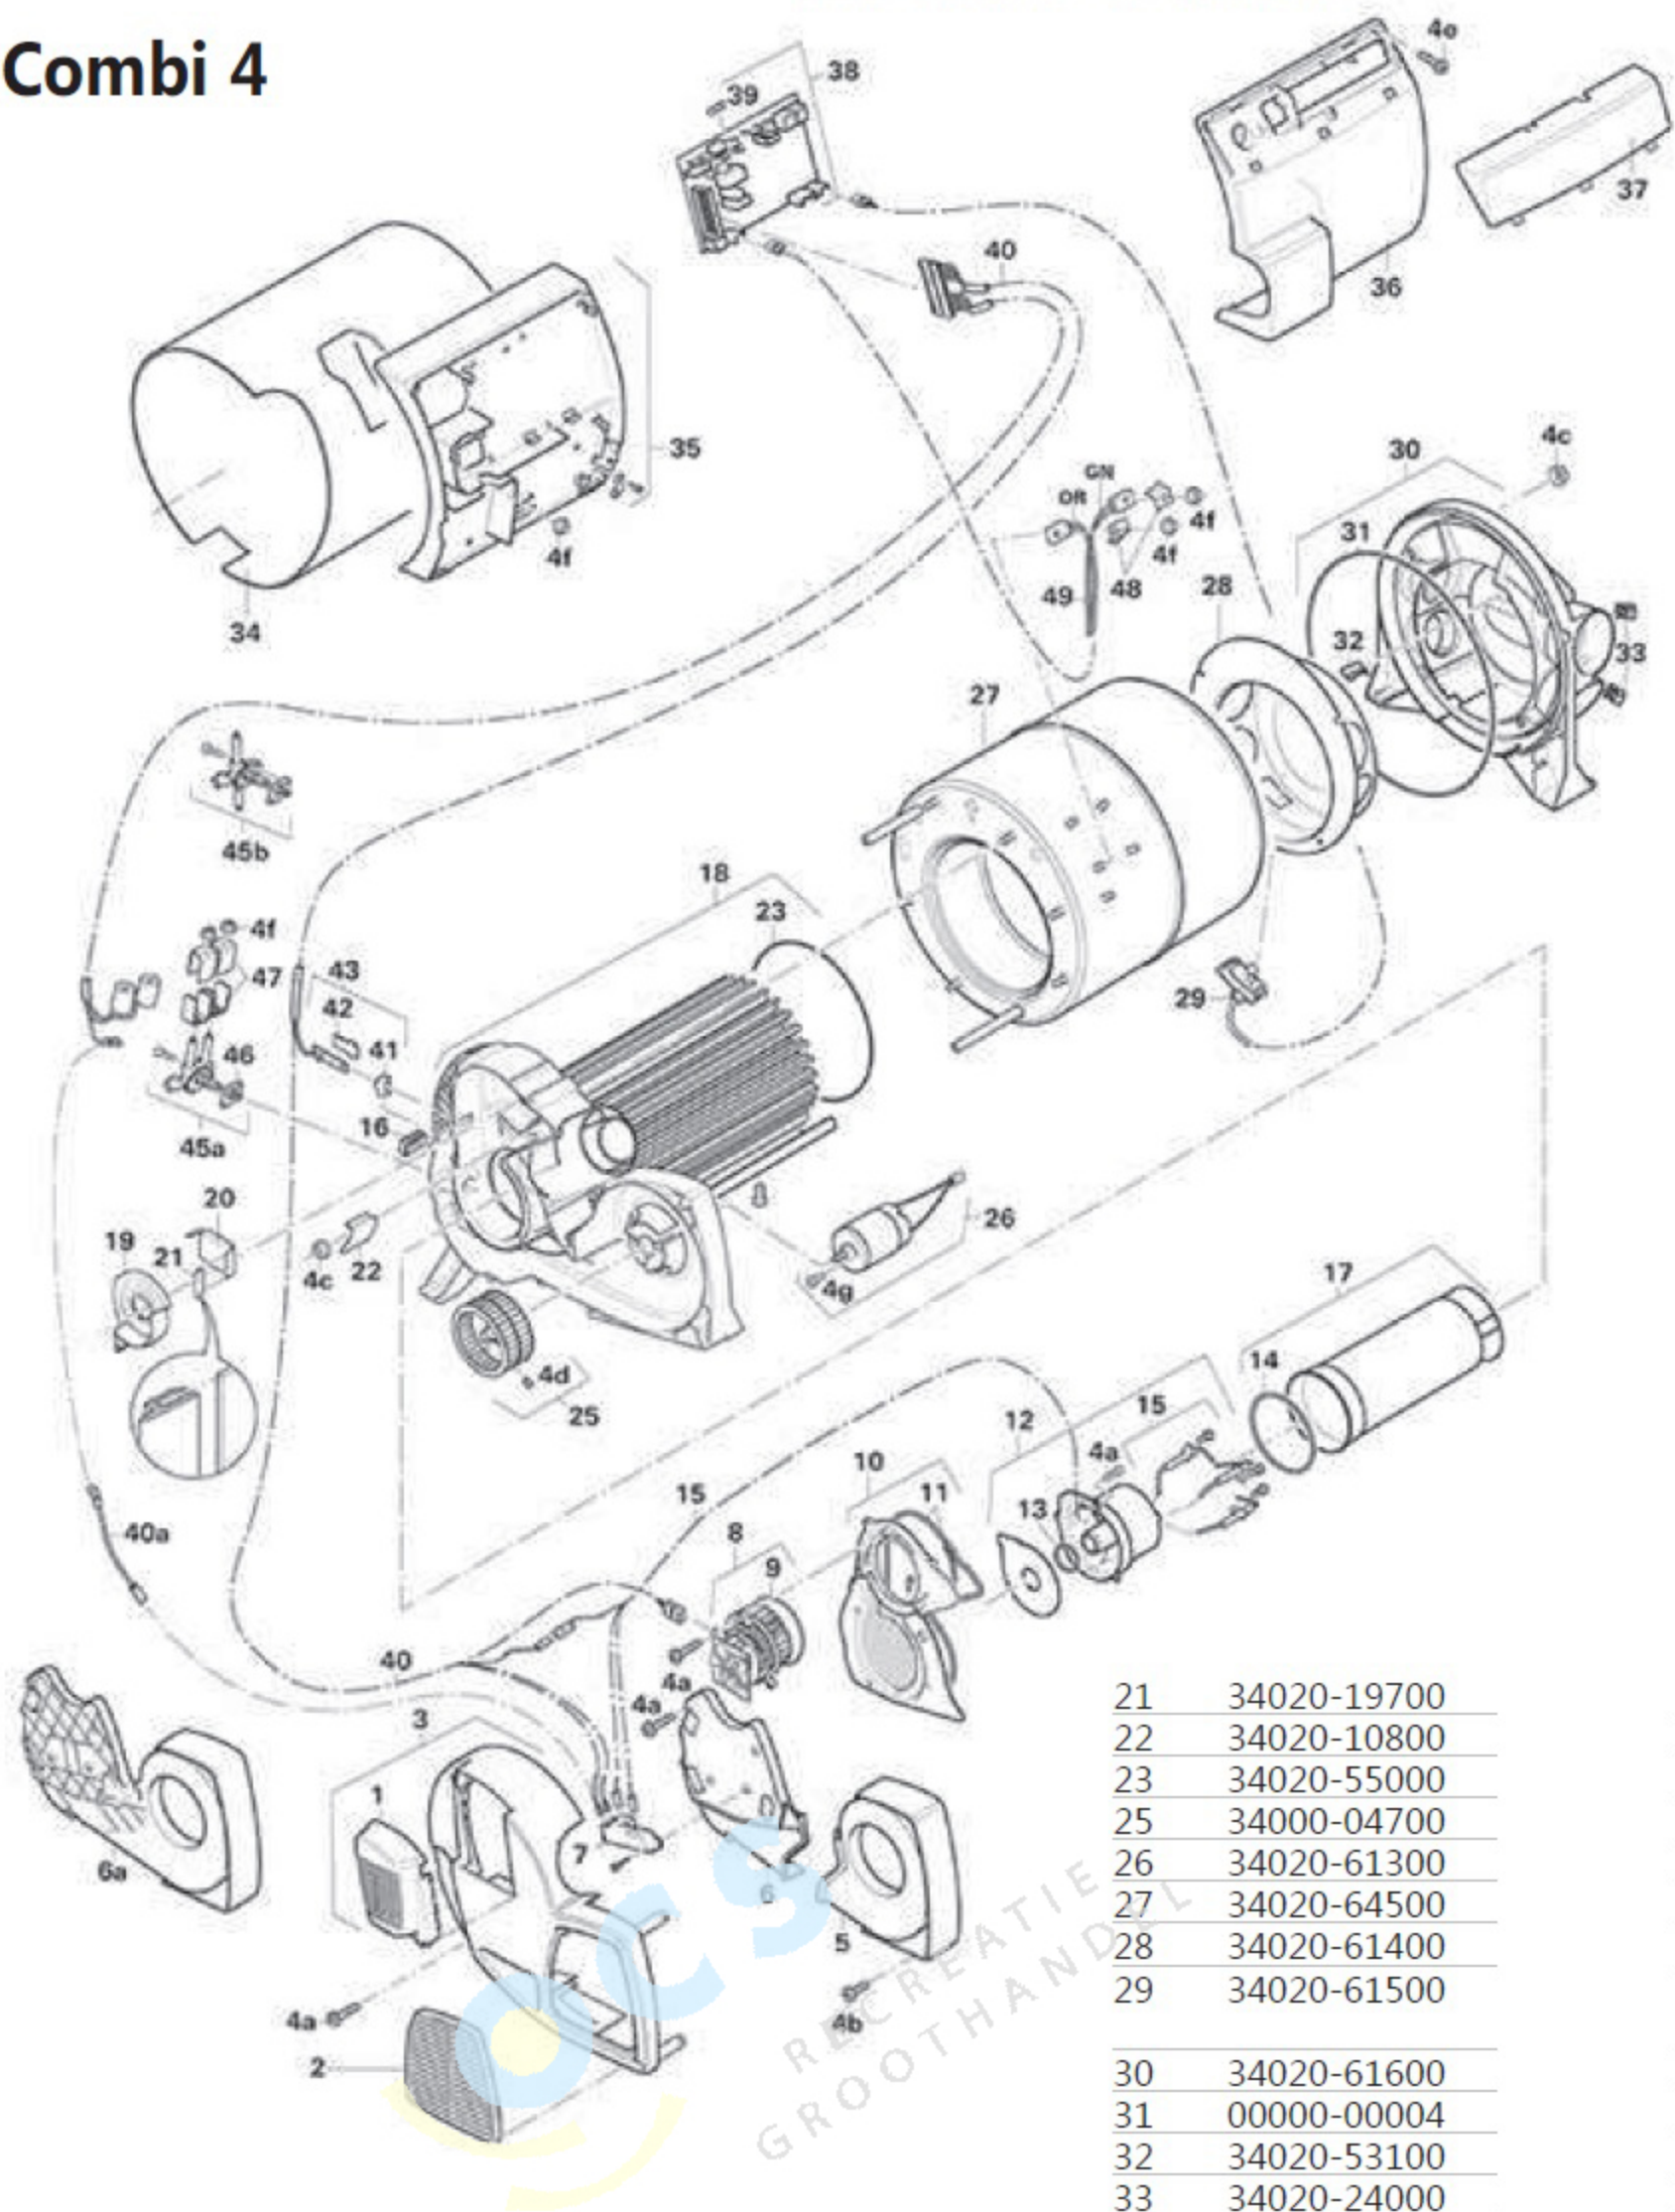

| No. | Truma No.   |
|-----|-------------|
| 01  | 34020-07100 |
| 02  | 34020-07300 |
| 03  | 34020-21600 |
| 04  | 34020-60000 |
| 05  | 34020-65000 |
| 06  | 34020-65100 |
| 06a | 00000-00001 |
| 07  | 34020-60200 |
| 08  | 34020-60300 |
| 09  | 34020-08700 |
| 10  | 34020-60400 |
| 11  | 34020-60600 |
| 12  | 34020-60700 |
| 13  | 10030-24200 |
| 14  | 34020-08800 |
| 15  | 34020-60800 |
| 16  | 34020-08600 |
| 17  | 34020-60900 |
| 18  | 34020-61000 |
| 19  | 34020-01500 |
| 20  | 34020-10700 |

| Description                 |
|-----------------------------|
| Cover combustion air        |
| Grill                       |
| Cover circulation air       |
| Screw / nut set             |
| Cover circulation air right |
| Cover circulation air left  |
| N/A Cover                   |
| Ignitor                     |
| Combustion air motor        |
| Cord seal 79 x 3 mm         |
| Cover combustion air        |
| Round cord seal set         |
| Burner pot complete         |
| O-ring 22 x 3               |
| Round cord seal             |
| Ignitor plug kit            |
| Cable bushing               |
| Flame tube                  |
| Heat exchanger              |
| Ring                        |
| Acoustic plate 1            |

|     |             |
|-----|-------------|
| 21  | 34020-19700 |
| 22  | 34020-10800 |
| 23  | 34020-55000 |
| 25  | 34000-04700 |
| 26  | 34020-61300 |
| 27  | 34020-64500 |
| 28  | 34020-61400 |
| 29  | 34020-61500 |
| 30  | 34020-61600 |
| 31  | 00000-00004 |
| 32  | 34020-53100 |
| 33  | 34020-24000 |
| 34  | 34020-95900 |
| 35  | 34020-61700 |
| 36  | 34020-61800 |
| 37  | 34020-06500 |
| 38  | 34030-18400 |
|     | 34030-18200 |
| 39  | 34010-05900 |
| 40  | 34020-62500 |
| 40a | 34020-57000 |
| 41  | 34020-62800 |
| 42  | 34020-14900 |
| 43  | 34020-63500 |
| 44  | 00000-00001 |
| 45a | 34020-59000 |
| 45b | 34020-63000 |
| 46  | 34020-52900 |
| 47  | 70000-54600 |
| 48  | 34020-03500 |
| 49  | 34020-63200 |

|                                             |
|---------------------------------------------|
| Profiled gasket                             |
| Acoustic plate 2                            |
| Form seal                                   |
| Fan wheel - air                             |
| D.C. motor with screws                      |
| Water container CB/CBE                      |
| Interior air hood                           |
| Thermostat plate LTF Air temperature sensor |
| Warm air distributor                        |
| is no longer required                       |
| Clip > no. 19264001                         |
| Clips, 4 pieces                             |
| Envelope HDF- Therm black                   |
| Electronic housing                          |
| Electronic housing lid                      |
| Combi connection cover                      |
| Exchange-Electronic CB 4/ 4E                |
| Electronic CB 4/ 4 E                        |
| Fuse 10 AT, H                               |
| Cable harness CB 4 / 4 E                    |
| Earth cable - flint ignitor                 |
| Holder thermostat plate                     |
| Insulating plate, thermostat plate          |
| Thermostat plate device CB 4 / 4 E          |
| N/A Solenoid coils                          |
| Solenoid valve > 05/13                      |
| Solenoid valve < 04/13                      |
| Sealing bracket, coated                     |
| Set coil holders                            |
| Heat conducting plate                       |
| Water temp sensor/ switch cable harness     |